








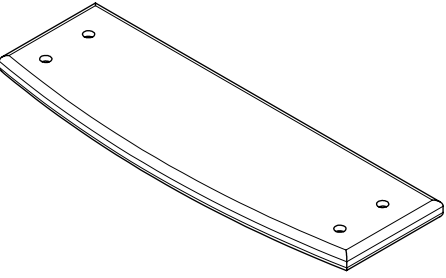




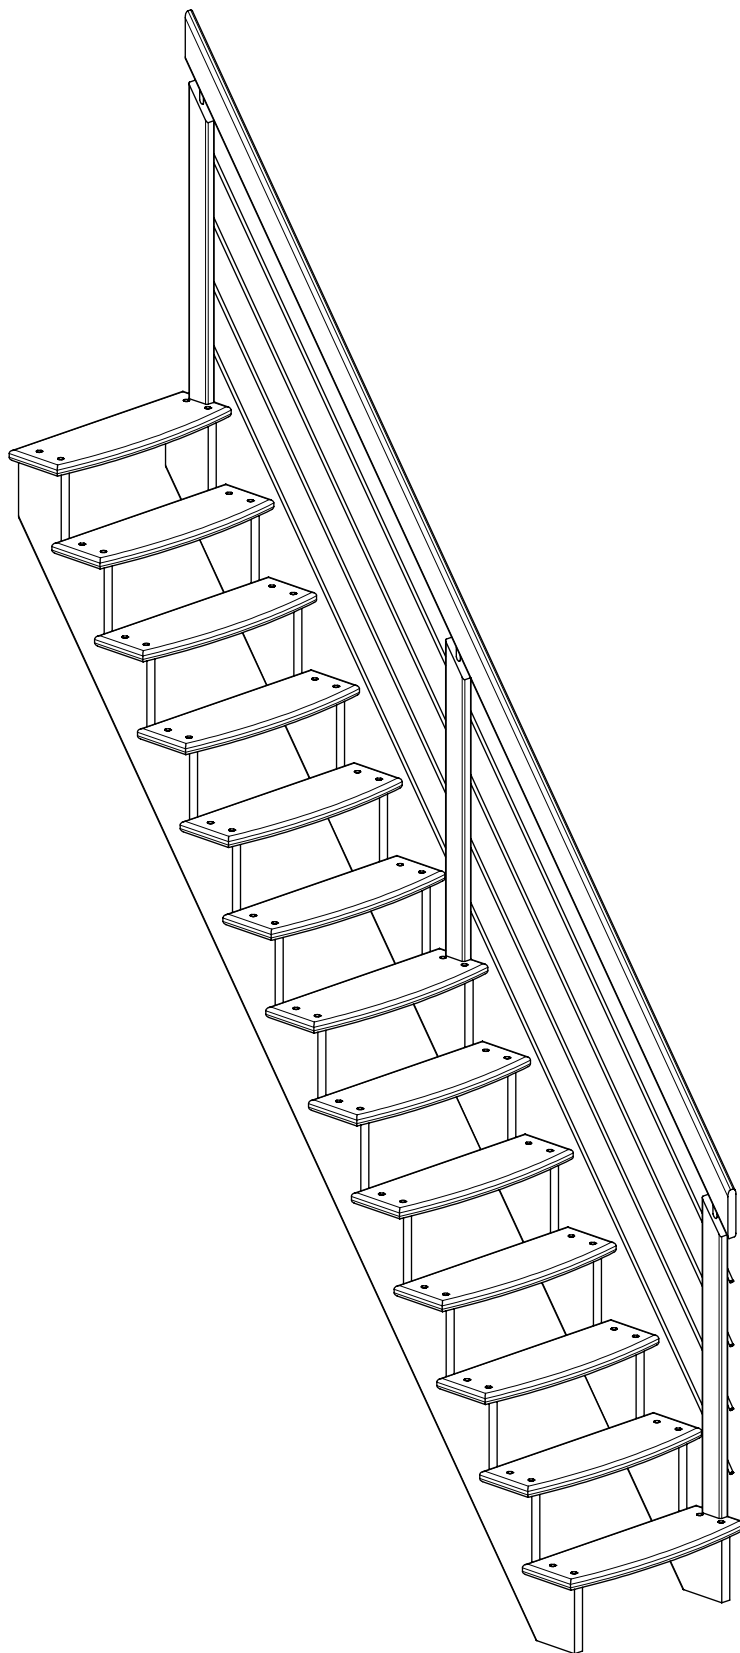




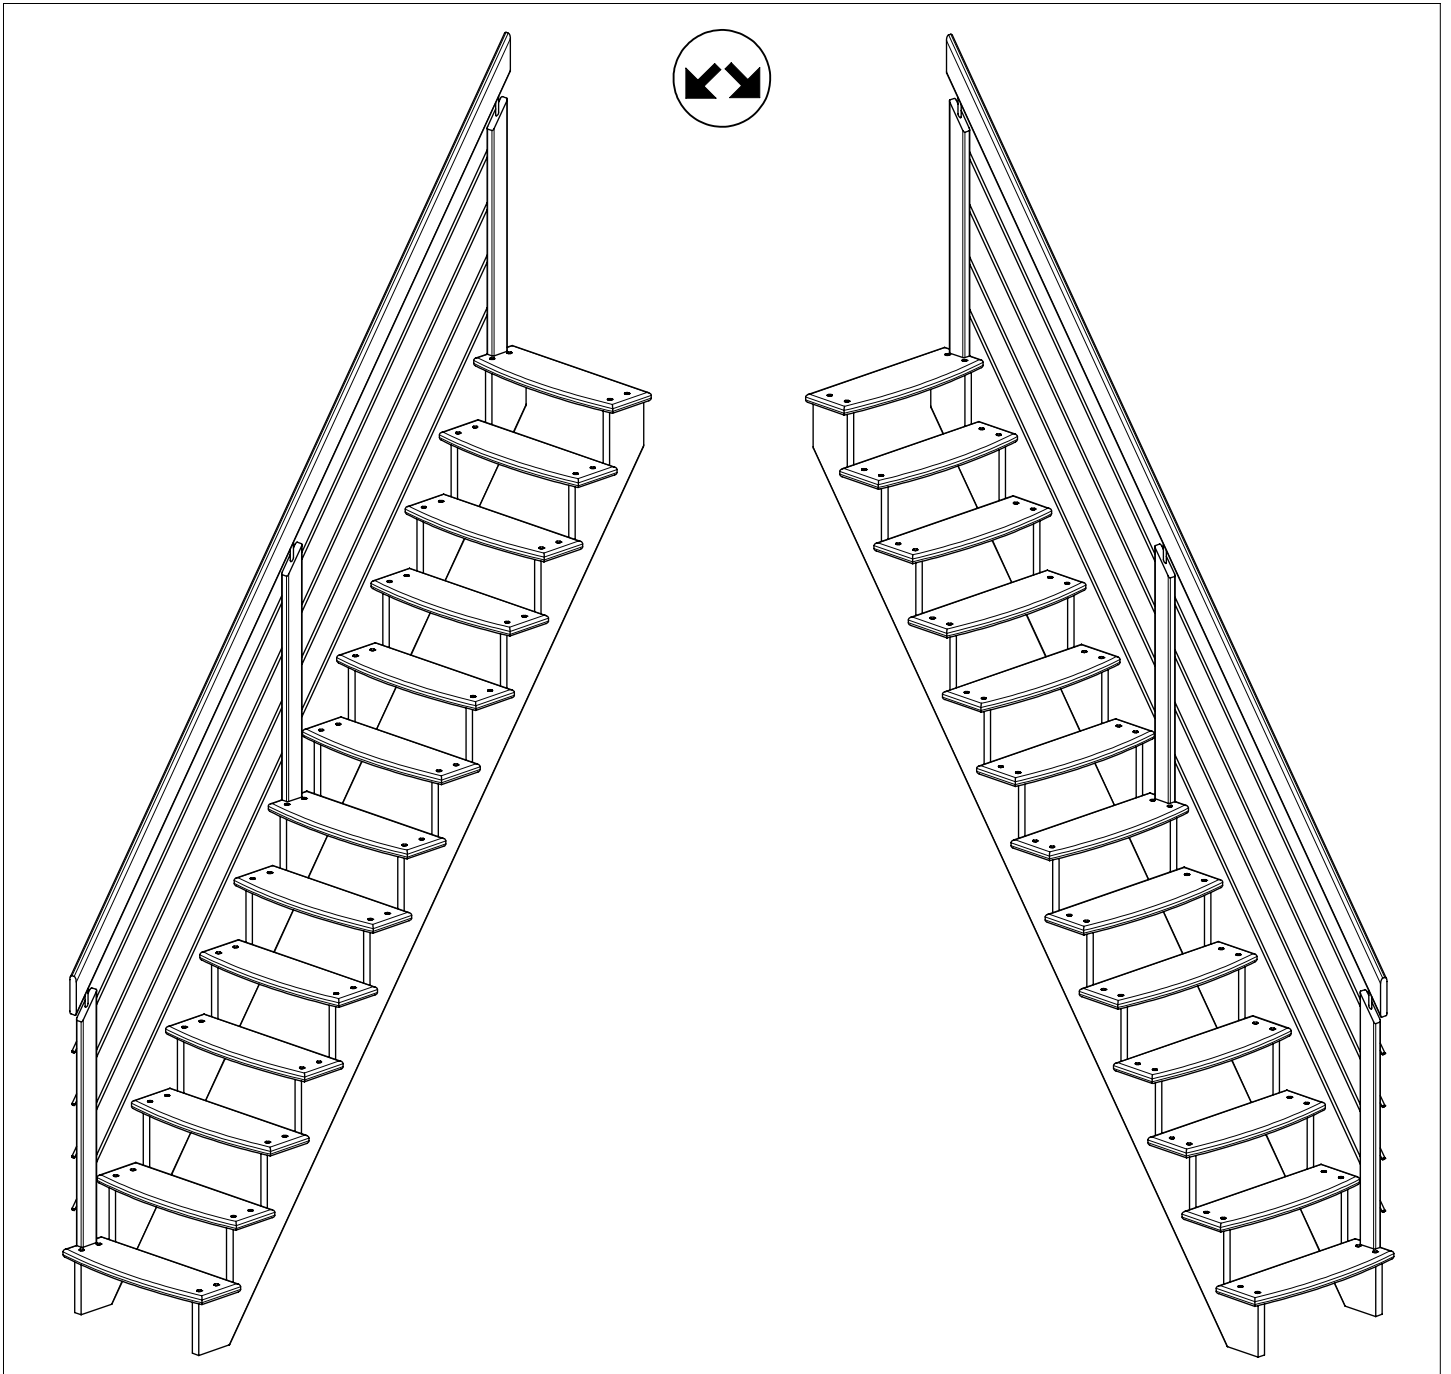
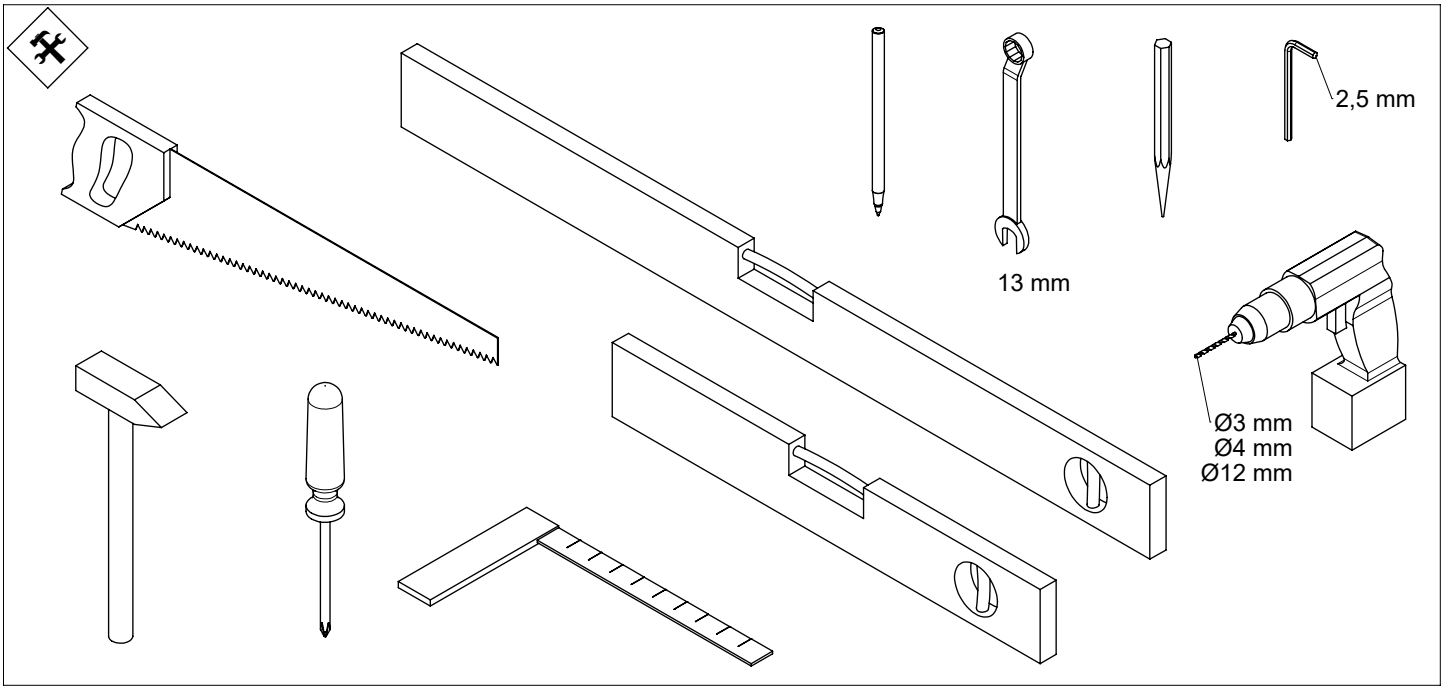


# LYON




Installation instruction  
Montageanleitung  
Instruction de montage

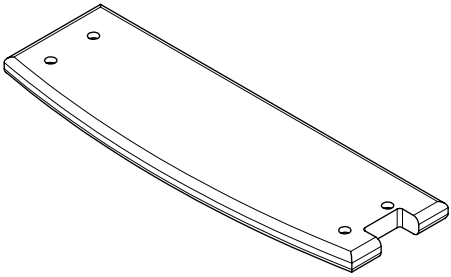



<p>1</p>  <p>x 2</p>				
<p>2</p>  <p>x 1</p>				
<p>3</p>  <p>Ø 10mm</p> <p>x 4 R1-63822</p>				
<p>4</p>  <p>x 3</p>	<p>6</p>  <p>x 3</p>	<p>7</p>  <p>Ø 10mm</p> <p>x 3 R1-63820</p>	<p>8</p>  <p>Ø 16mm</p> <p>x 52</p>	<p>9</p>  <p>x 6 R3-72160</p>
<p>5</p>  <p>x 10</p>		<p>10</p>  <p>x 4 C1-09910</p>	<p>11</p>  <p>x 1 R3-90050</p>	<p>12</p>  <p>x 12 K2-46015</p>
		<p>13</p>  <p>x 8 K1-01010</p>		
<p>20</p>  <p>x 58 R3-72110 Ø5 x 50</p>	<p>21</p>  <p>x 12 K3-06104 Ø5 x 40</p>	<p>22</p>  <p>x 4 R3-91290 Ø12 x 60</p>	<p>23</p>  <p>x 4 R3-91060 Ø8 x 60</p>	<p>24</p>  <p>x 8 R3-91360 Ø5 x 25</p>




1

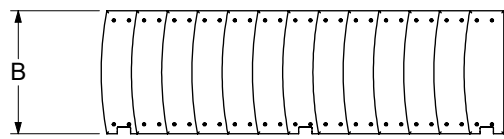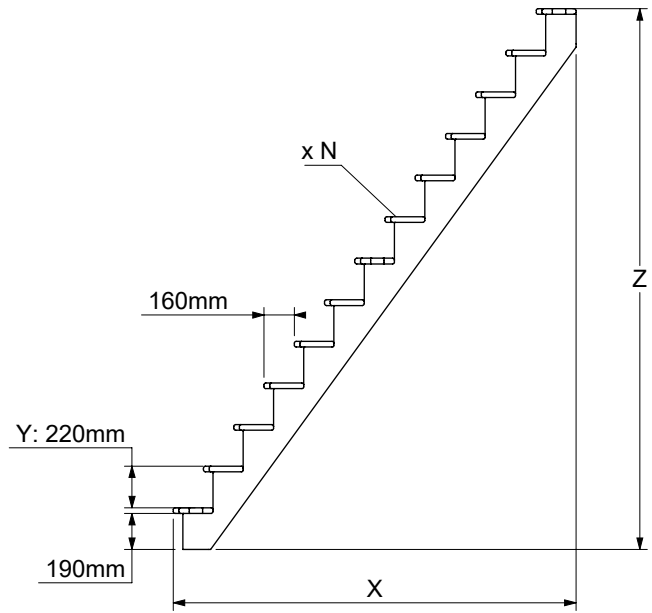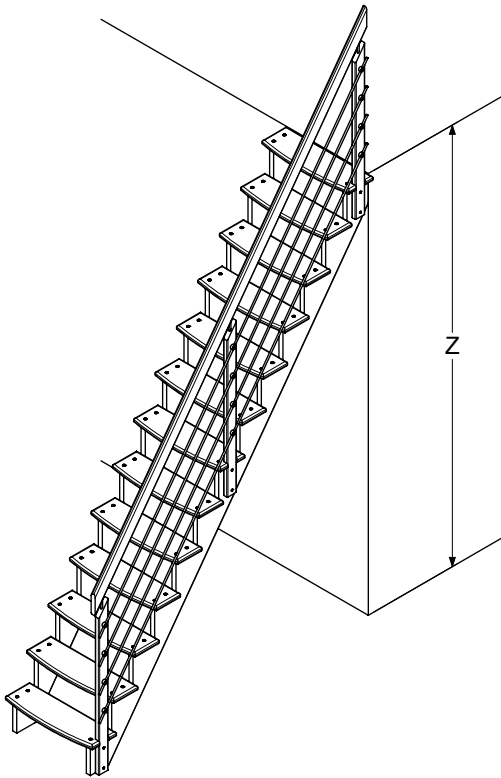

Y: 220mm			
N [st / p]	Z [mm]	X [mm]	
		B: 650mm	B: 750mm
11	2420	1810	1810
12	2640	1970	1970
13	2860	2130	2130

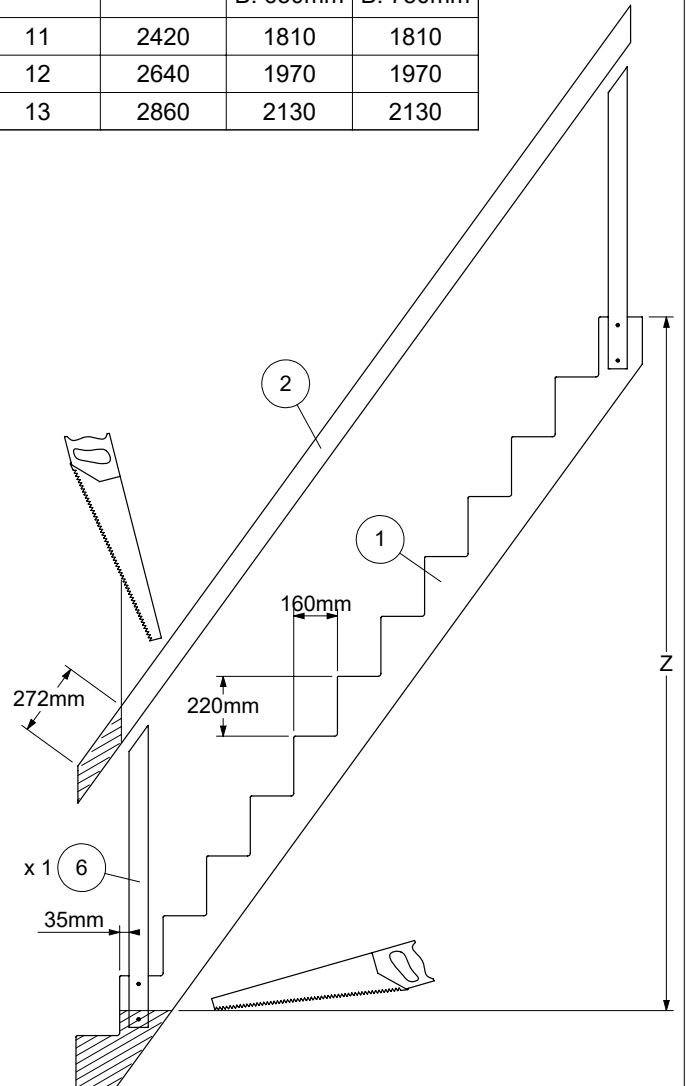
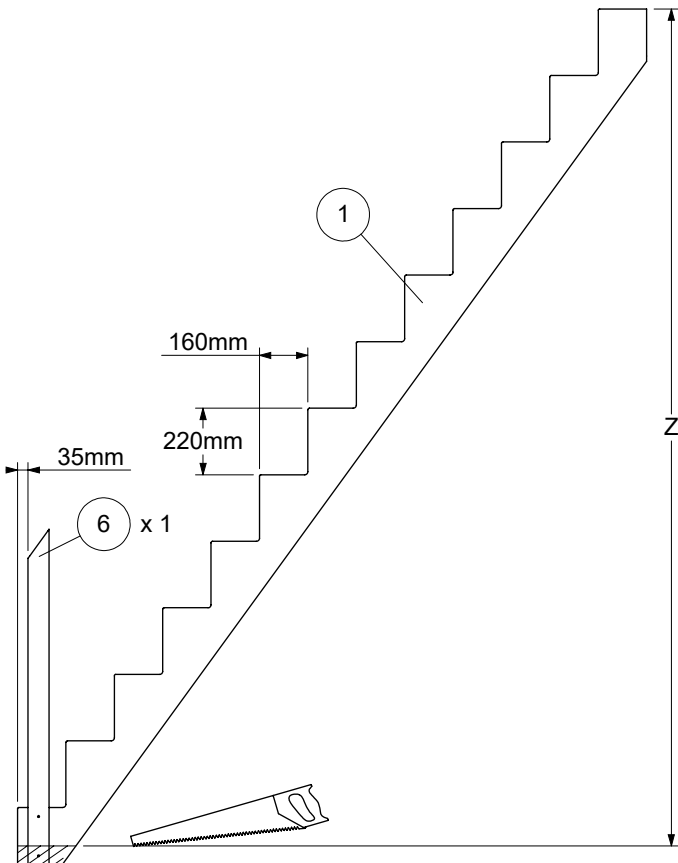


2

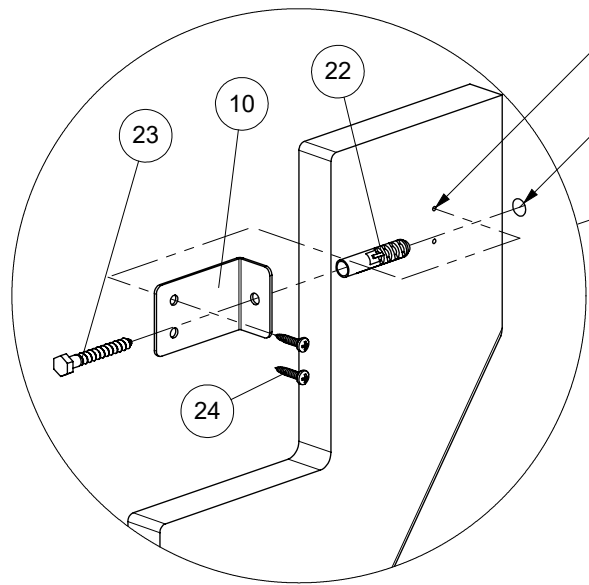



2 x  $\varnothing$  3mm  
↓ 20mm

$\varnothing$  12mm  
↓ 70mm

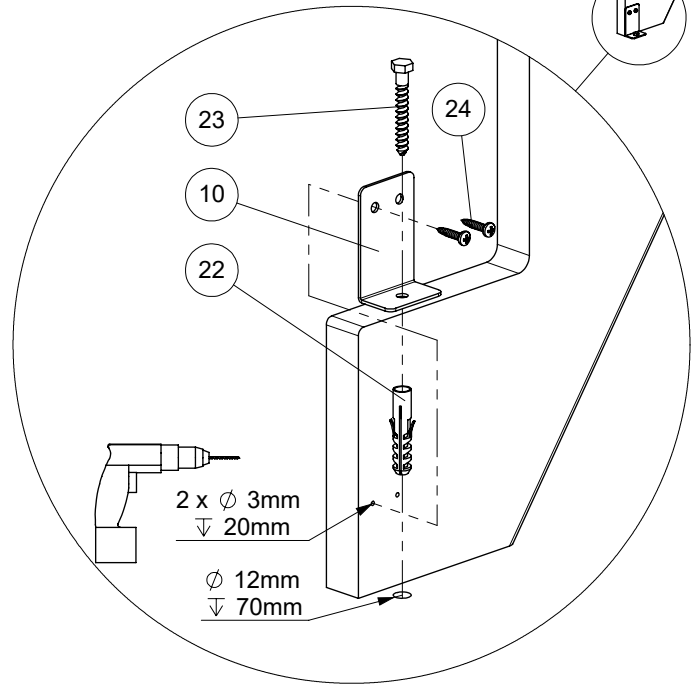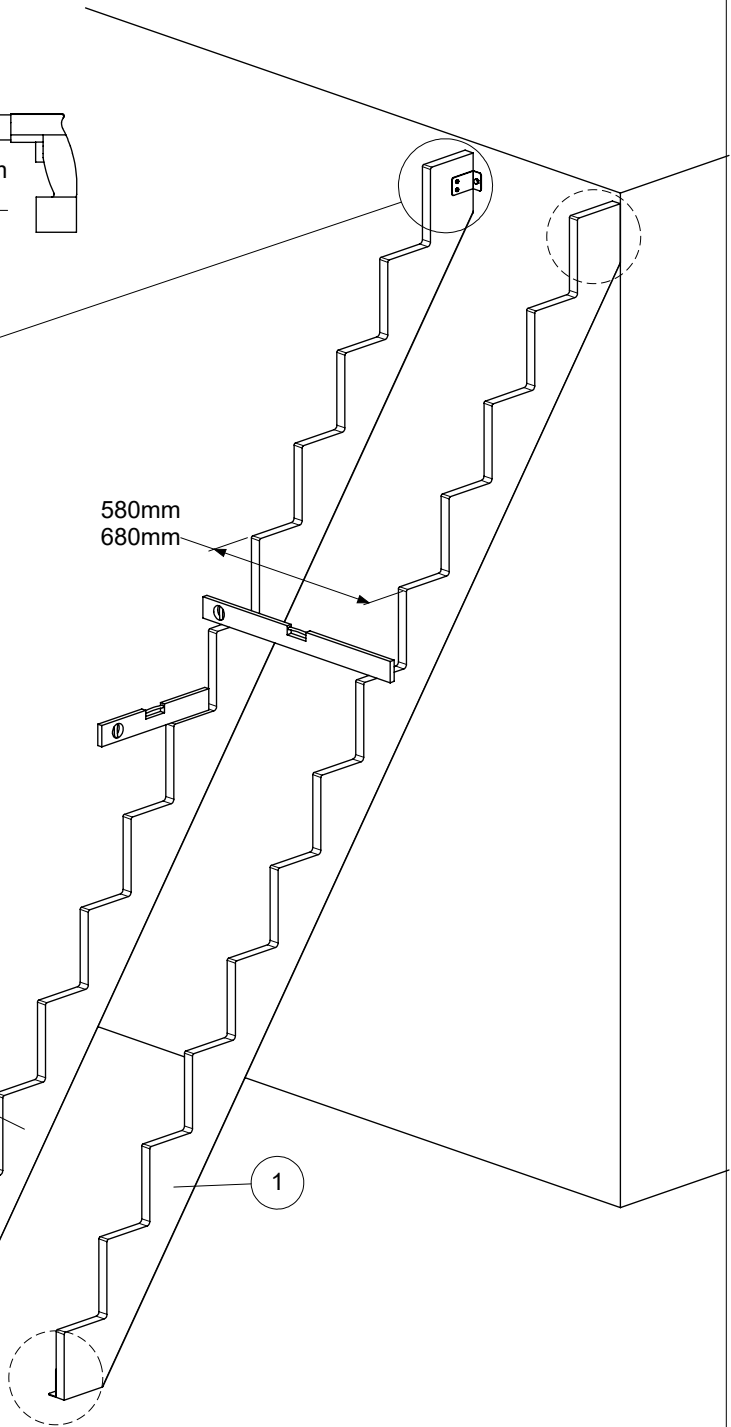


2 x  $\varnothing$  3mm  
↓ 20mm

$\varnothing$  12mm  
↓ 70mm

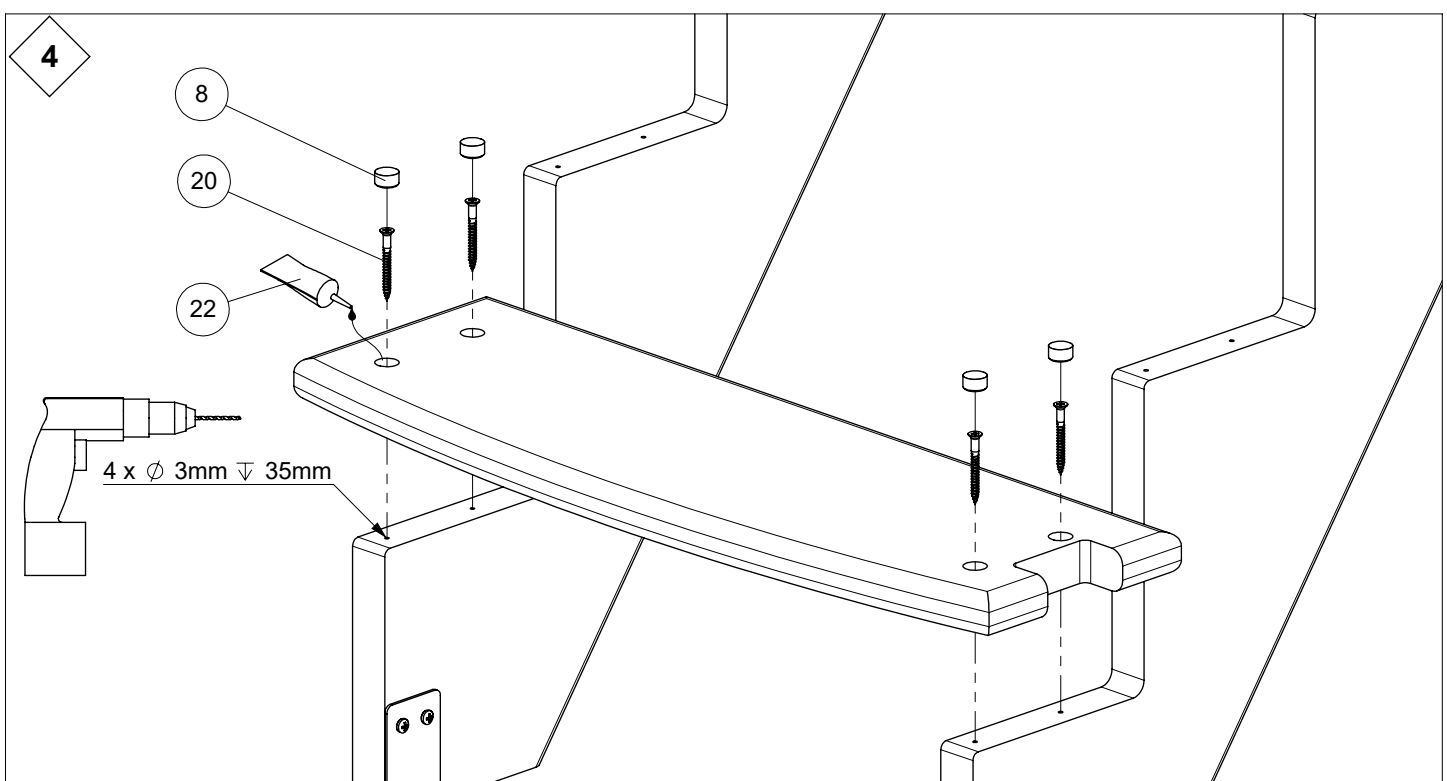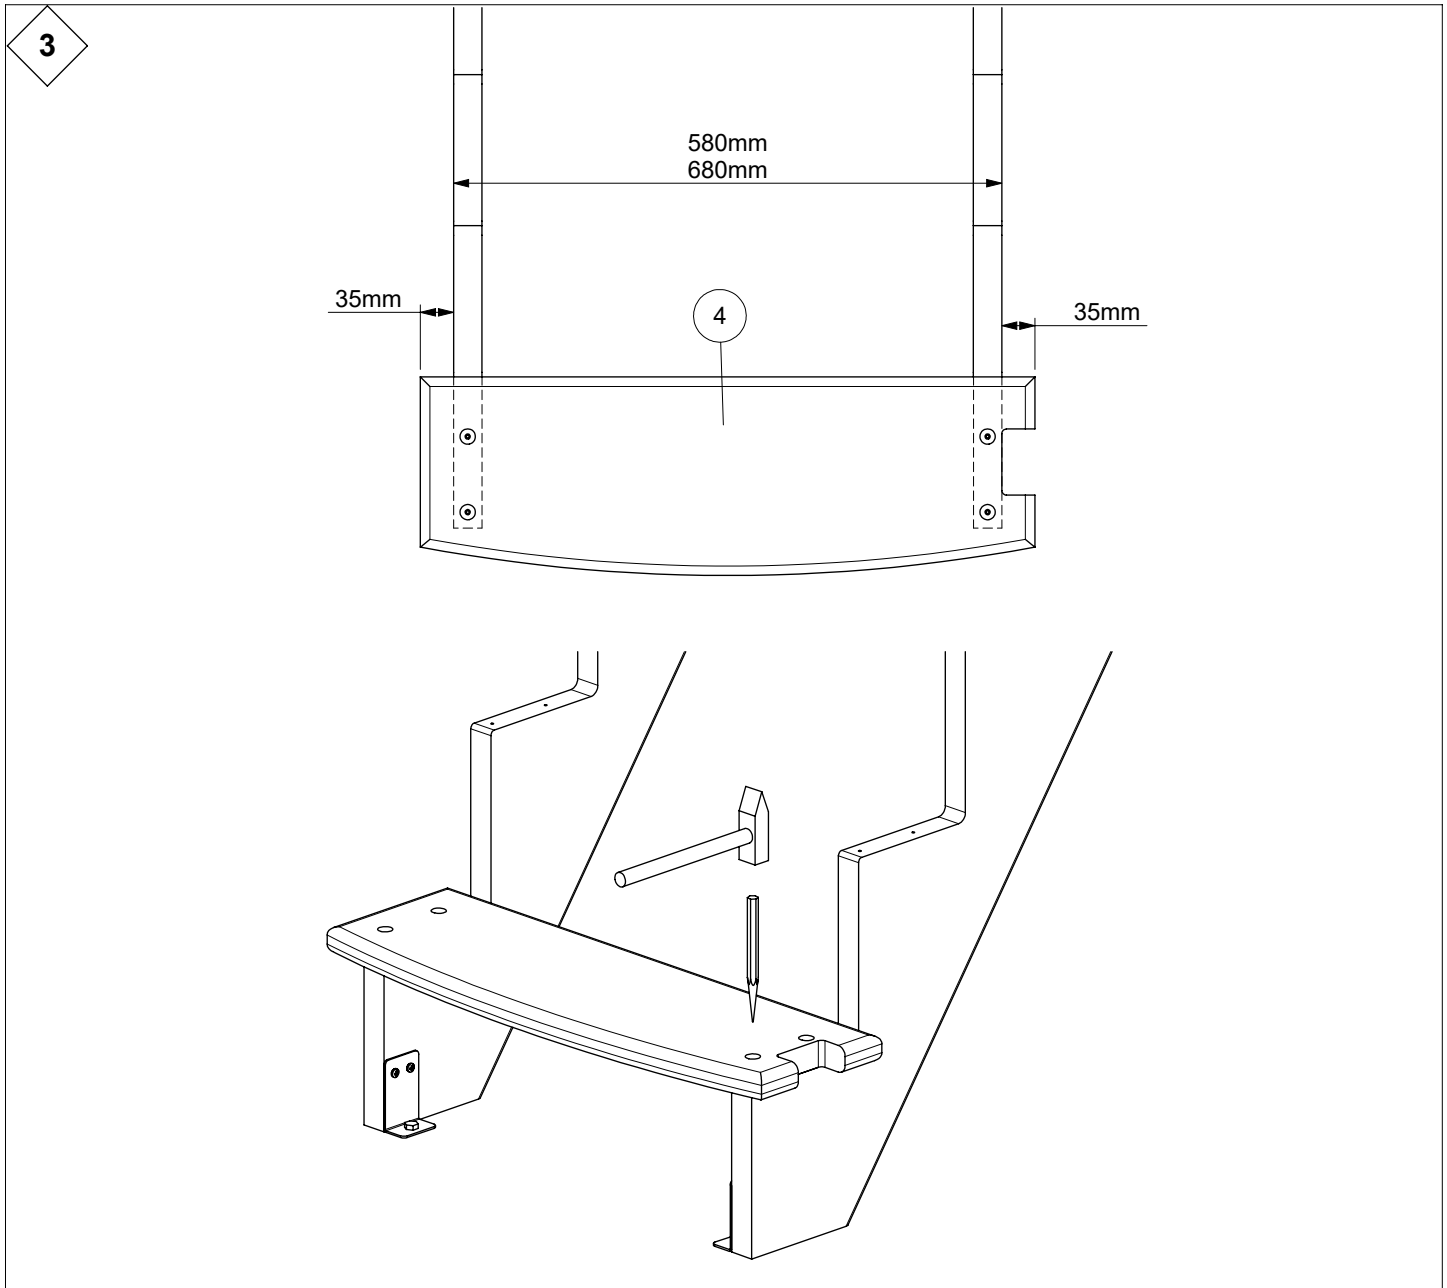




6

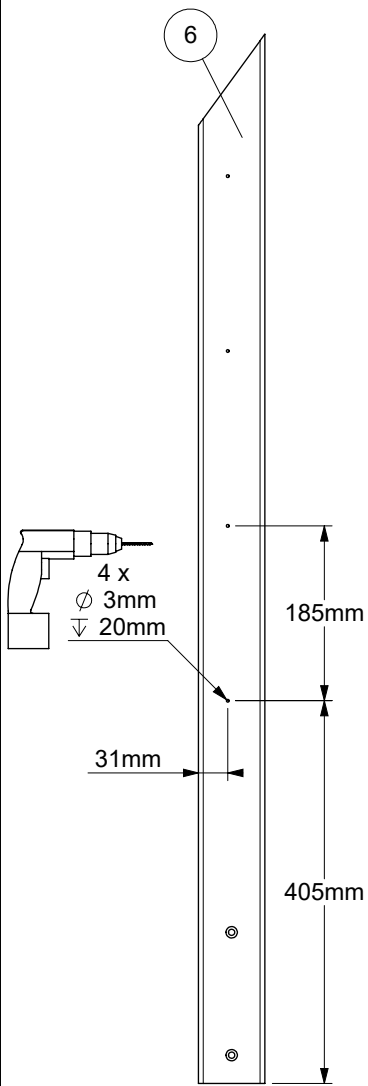


7

8

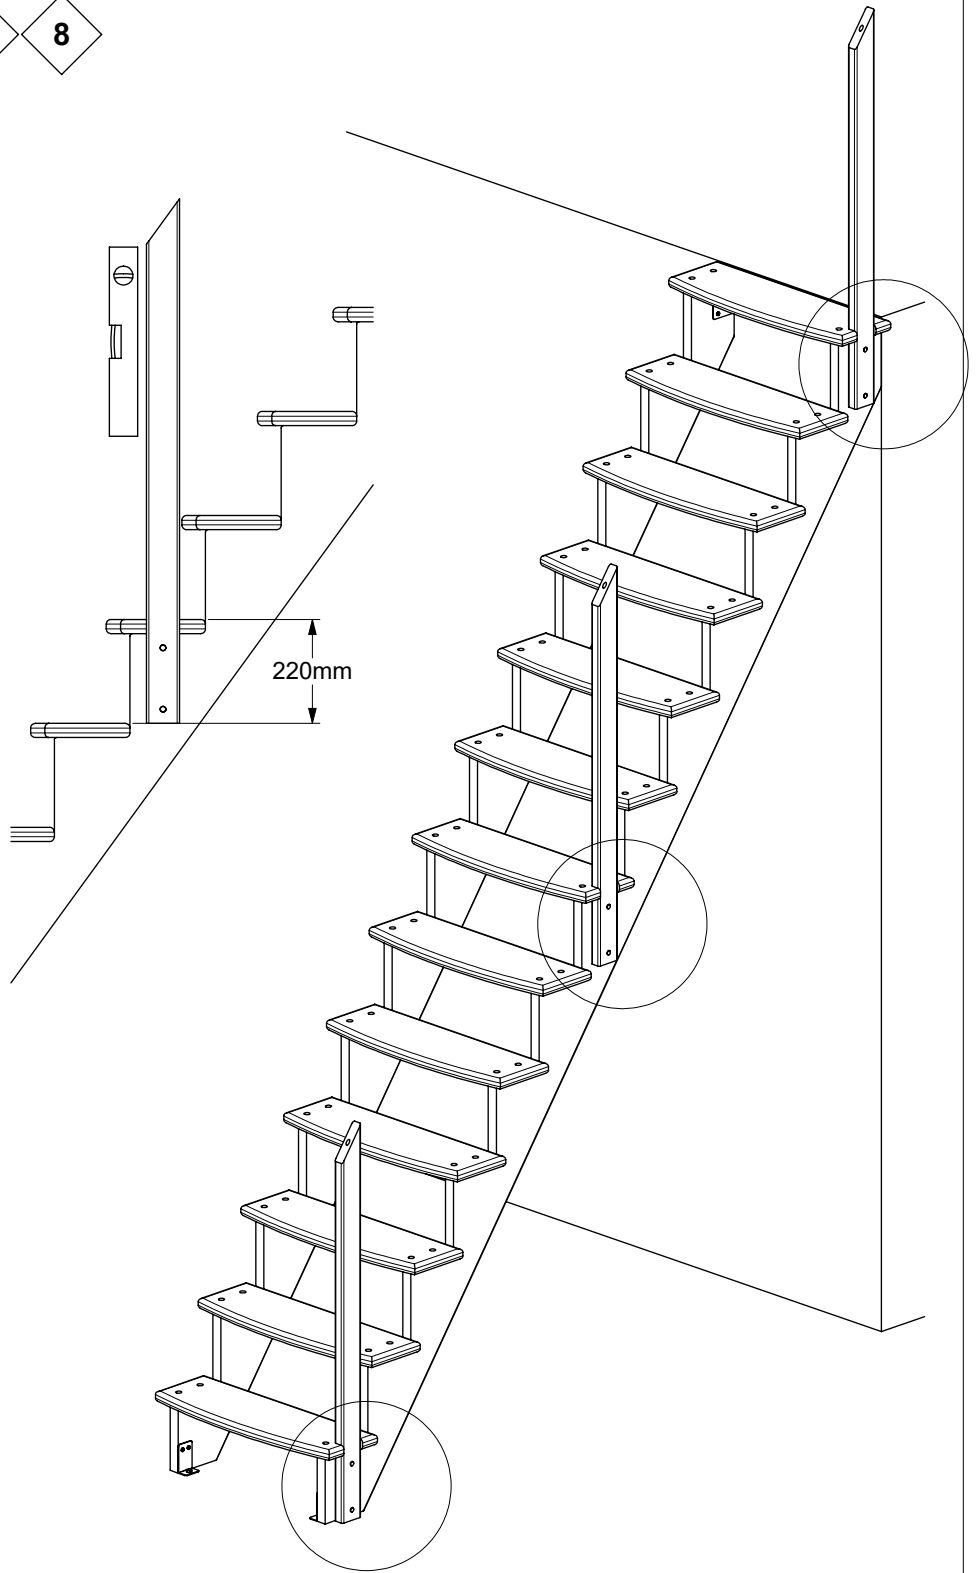

7

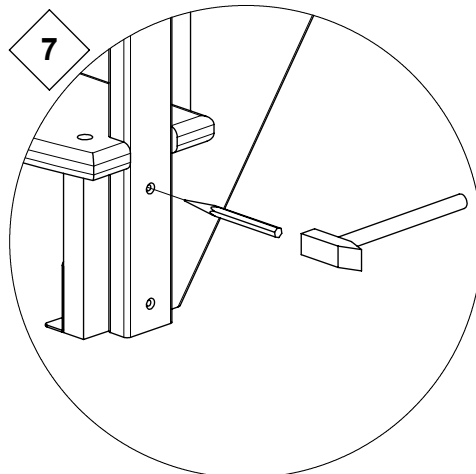

8

